

LUBRICATION

LUBRICATION POINTS

Unless otherwise specified, use general purpose grease. Apply oil or grease to any other sliding surfaces not shown here.

CONTROL CABLE LUBRICATION

Periodically disconnect the throttle and clutch cables at their upper ends. Clean the cable end mount in the throttle and clutch lever, then oil the cable ends and reinstall. It is not necessary to oil the cables: if a cable begins to bind, it must be replaced.

* MULTIPURPOSE GREASE NLG1 No. 2
(MOLYBDENUM DISULFIDE ADDITIVE)

WHEEL BEARINGS

Grease new wheel bearings and dust seals before installation. Do not reinstall used wheel bearings or seals. Apply a paste grease with 40% or more molybdenum disulfide to the * mark components (2, 3 and 10 below).

NOTE

Some sources of MoS₂ paste grease with 40% or more molybdenum are:

- Molykote® G-n Paste manufactured by Dow Corning, U.S.A.
 - Honda Moly 45 (U.S.A. only)
 - Rocol ASP manufactured by Rocol Limited, U.K.
 - Rocol Paste manufactured by Sumico Lubricant, Japan.
- Any other manufacturer's paste grease equivalent to the above may also be used.

