

MAINTENANCE

Major adjustments are made with the lower adjuster on the carburetor.

Remove the seat.


Turn the fuel valve to OFF, disconnect the fuel line and remove the fuel tank.

Adjust free play by loosening the lock nut and turning the adjuster.

Tighten the lock nut.


Recheck throttle operation. Replace any damaged parts.

Install the fuel tank and seat.

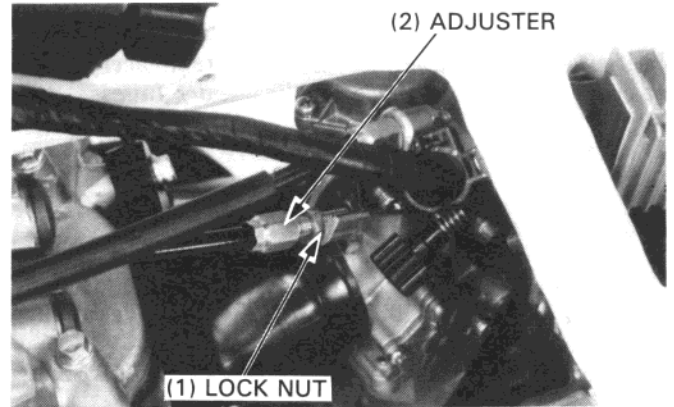

AIR CLEANER

Unhook the three fasteners and remove the frame left side cover.

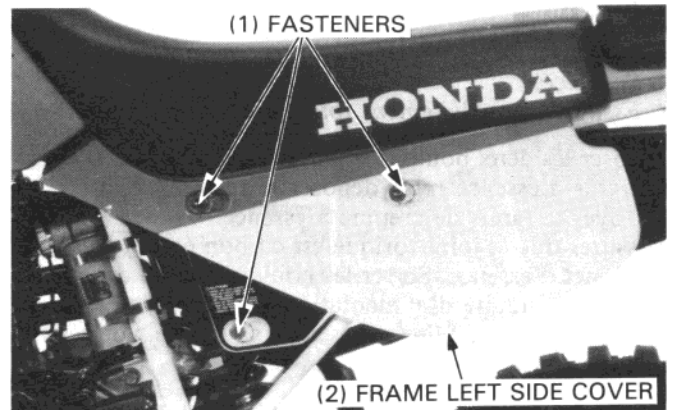


NOTE

- If the inlet duct cap is attached, remove the seat and inlet duct cap.

Release the air cleaner element clamp and remove the element with the holder.

Separate the element from the holder.

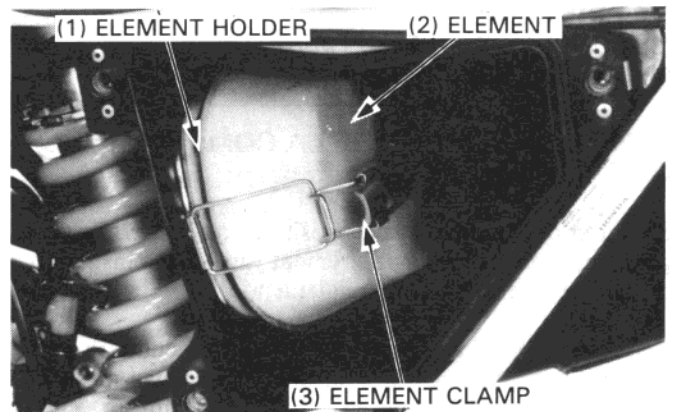

Wash the element in non-flammable or high flash point solvent, and let it dry.

Soak the element in gear oil (SAE #80–90) and squeeze out the excess.

Install the removed parts in the reverse order of disassembly.

