

MAINTENANCE

BRAKE SYSTEM

FRONT BRAKE LEVER FREE PLAY

Measure the front brake lever free play at the tip of the lever.



FREE PLAY: 0.6–8.0 mm (0.02–0.3 in)

To increase free play, loosen the lock nut and turn the adjuster counterclockwise. To decrease free play, turn the adjuster clockwise.

If the brake lever free play exceeds 8 mm (0.3 in) and the clearance between the adjuster and the front brake master cylinder piston ("A") is less than 1.4 mm (0.06 in), there is probably air in the brake system and it must be bled (page 14-3).

▲ WARNING

- *Never use any adjusters other than those designed for this motorcycle. Install a new adjuster from the lever side with the lock nut under the head of the adjuster.*

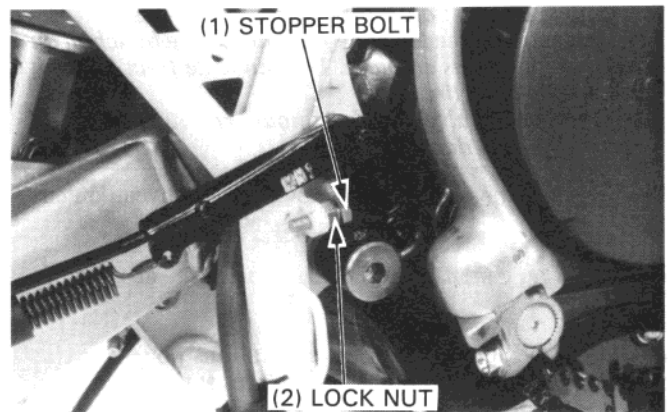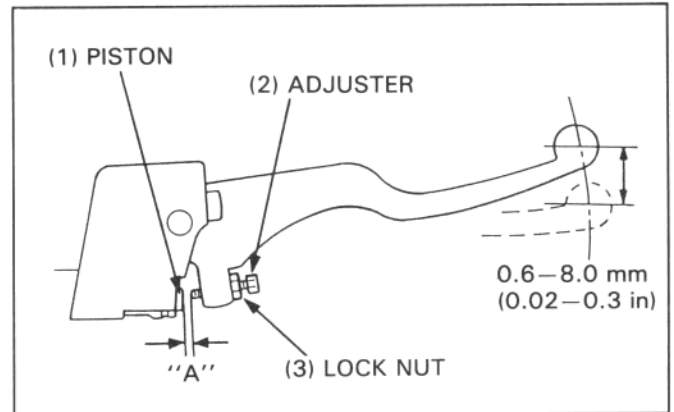

BRAKE PEDAL HEIGHT

To adjust:

Loosen the lock nut and adjust the pedal height by turning the stopper bolt. Tighten the lock nut.

Adjust the brake pedal free play.


BRAKE PEDAL FREE PLAY

NOTE

- Adjust the brake pedal free play after adjusting the brake pedal height.

Measure the brake pedal free play.

FREE PLAY: 20–30 mm (3/4–1-1/4 in)

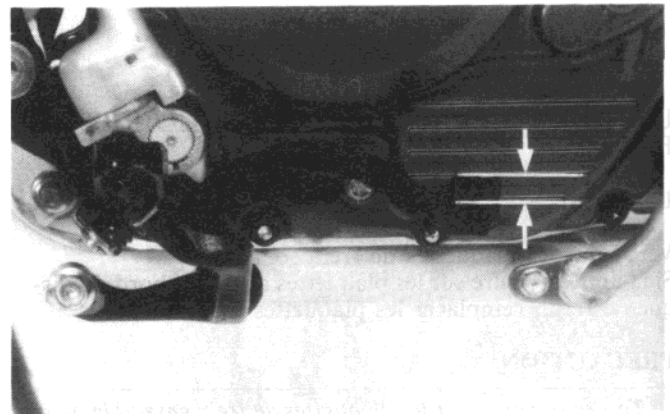

If adjustment is necessary, turn the rear brake adjusting nut.

