

FUEL SYSTEM

SERVICE INFORMATION	4-1	CARBURETOR DISASSEMBLY	4-7
TROUBLESHOOTING	4-2	CARBURETOR ASSEMBLY	4-10
FUEL TANK	4-3	CARBURETOR INSTALLATION	4-11
AIR CLEANER CASE	4-4	PILOT SCREW ADJUSTMENT	4-12
CRANKCASE BREATHER	4-5	TEMPERATURE AND ALTITUDE ADJUSTMENT	4-12
CARBURETOR REMOVAL	4-6		

SERVICE INFORMATION

GENERAL

▲ WARNING

- *Keep gasoline away from flames or sparks. Wipe up spilled gasoline at once.*
-

CAUTION

- *Do not bend or twist control cables. Damaged control cables will not operate smoothly and may stick or bind.*
-

- When disassembling fuel system parts, note the locations of the O-rings. Replace them with new ones on reassembly.
- The carburetor float bowl has a drain screw that can be loosened to drain residual gasoline.

SPECIFICATIONS

Fuel tank capacity	10 lit (2.6 U.S. gal, 2.3 Imp gal)	
Reserve capacity	2 lit (0.5 U.S. gal, 0.4 Imp gal)	
Carburetor		< > : Umodel
Type	Piston valve	
Identification number	PD8AA <PD8AB>	
Jet needle setting	3rd groove	
Float level	14.5 mm (0.57 in)	
Pilot screw opening	2-5/8 turns out	
Main jet	# 165 <# 135>	
Slow jet	#60	
Idle speed	1,300 ± 100 min ⁻¹ (rpm)	
Air cut-off valve operating pressure.	390 mm Hg	
Throttle grip free play	2–6 mm (1/8–1/4 in)	

TOOL

Common	
Float level gauge	07401–0010000