

FUEL SYSTEM

FUEL TANK

FUEL TANK REMOVAL

Remove the seat.
Turn the fuel valve to OFF and disconnect the fuel line.
Remove the tank band, bolts and tank.

⚠ WARNING

- *Keep gasoline away from flames or sparks.*
- *Wipe up spilled gasoline at once.*

Check that fuel flows out of the fuel valve freely.
If flow is restricted, clean the fuel strainer (page 3-5).


FUEL TANK INSTALLATION

Install the fuel tank with the two mounting bolts and tank band.
Connect the fuel tube.

NOTE

- After assembling, make sure there are no fuel leaks.
- Do not overtighten the fuel valve screws.

Install the seat.

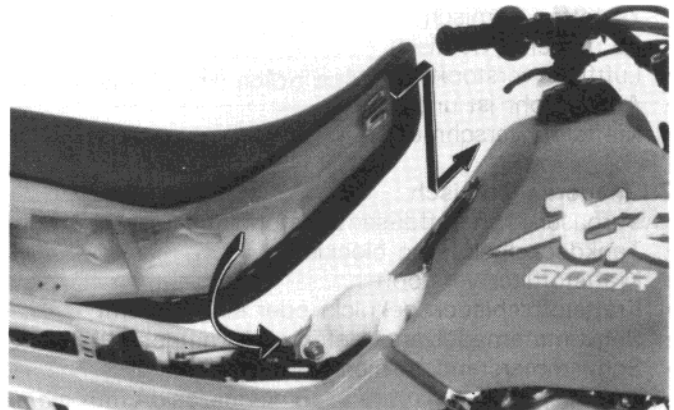

SEAT INSTALLATION

Be sure to hook the seat onto the fuel tank and frame, as shown.

