


FUEL SYSTEM

Remove the spring, diaphragm and O-ring.
Check the diaphragm for pin holes or other damage.

Assemble the air cut-off valve in the reverse order of disassembly.

NOTE

- Install the O-ring with its flat side toward the carburetor body.

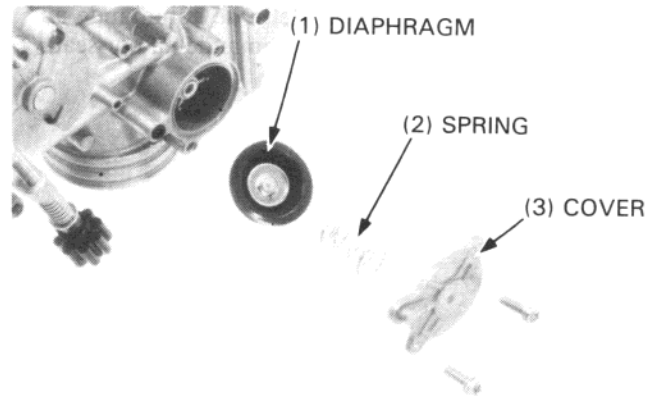

CARBURETOR ASSEMBLY

Blow open all passages with compressed air before installing jets and valves.

Reassemble the carburetor in the reverse order of disassembly.

