

SERVICE INFORMATION	5-2	ENGINE INSTALLATION	5-6
ENGINE REMOVAL	5-3		

SERVICE INFORMATION

GENERAL

- During removal and installation, support the motorcycle with a work stand or box.
- A jack or adjustable support is required to maneuver the engine.
- Parts requiring engine removal for servicing:
 - Crankshaft Section 10
 - Balancer Section 10
 - Transmission Section 11

SPECIFICATIONS

Engine weight	43.5 kg (96.0 lb)
Oil capacity	2.3 lit (2.4 U.S. qt, 2.0 Imp qt)

TORQUE VALUES

Engine hanger bolts:	
8 mm bolt	27 N•m (2.7 kg-m, 20 ft-lb)
10 mm bolt	40 N•m (4.0 kg-m, 29 ft-lb)
Foot peg nut	27 N•m (2.7 kg-m, 20 ft-lb)
Exhaust pipe clamp	27 N•m (2.7 kg-m, 20 ft-lb)
Exhaust pipe joint nut	27 N•m (2.7 kg-m, 20 ft-lb)
Rear axle nut	95 N•m (9.5 kg-m, 69 ft-lb)
Oil hose joint nut	40 N•m (4.0 kg-m, 29 ft-lb)
Oil pipe flare nut	40 N•m (4.0 kg-m, 29 ft-lb)