



ENGINE REMOVAL/INSTALLATION


Loosen the oil inlet hose and outlet pipe joint nuts. Disconnect the oil outlet pipe and hose and the oil inlet hose from the frame.

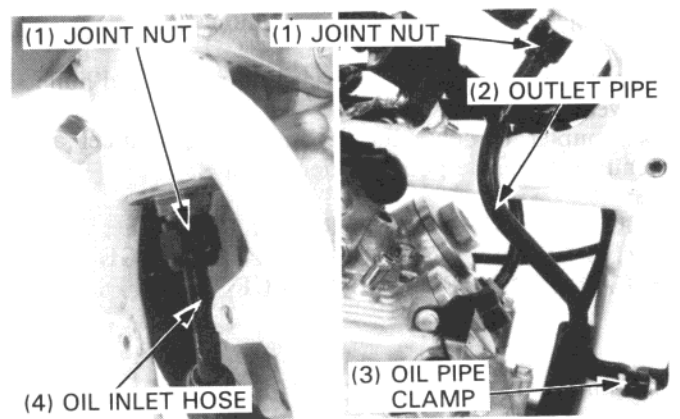

Loosen the oil inlet and outlet hose set plate bolts. Remove the oil pipe clamp and oil pipe.

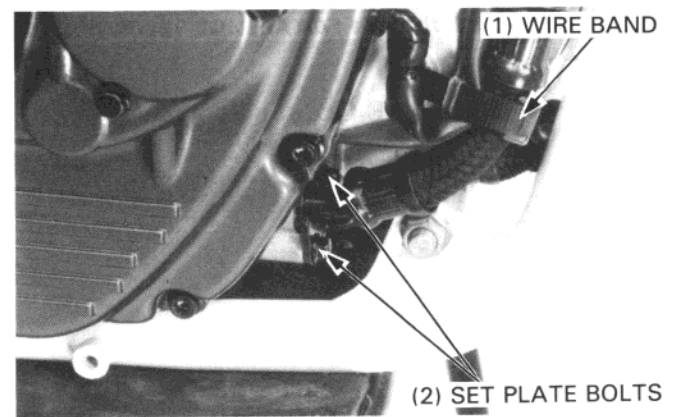

Remove the rear engine bracket.

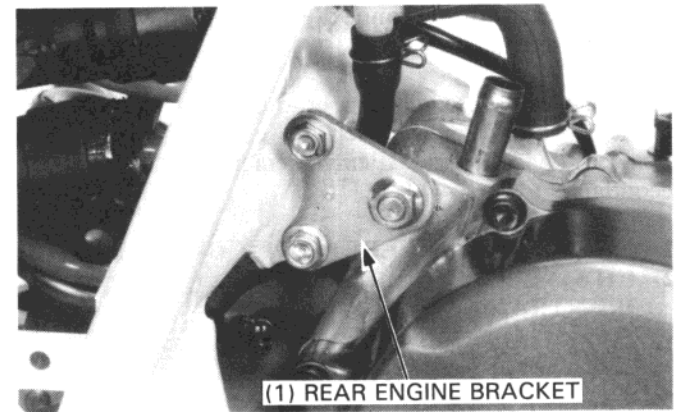

Remove the upper and front engine brackets. Remove the front and rear engine hanger bolts. Remove the engine from the right side.

