



CYLINDER HEAD/VALVES


Remove the valve lifter lever and spring.

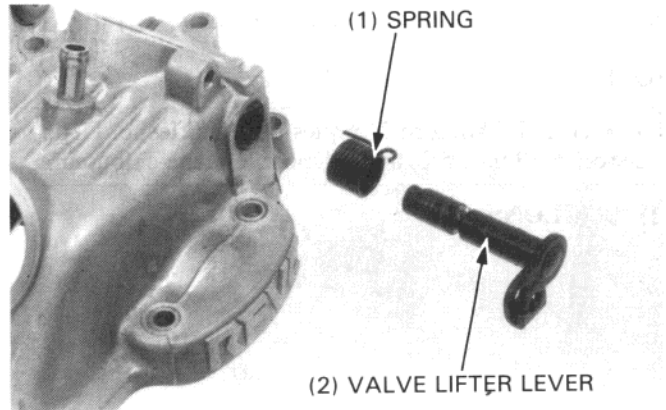

Remove the sub-rocker arm shafts, sealing washers, wave washers and sub-rocker arms from the cylinder head cover.

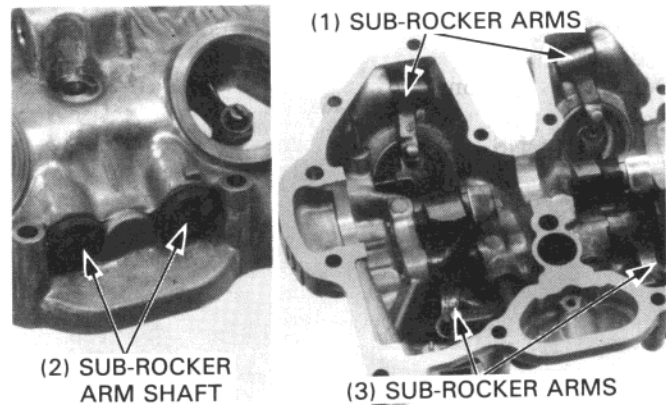

Remove the rocker arm shafts, copper washers, rocker arms from the cylinder head cover.

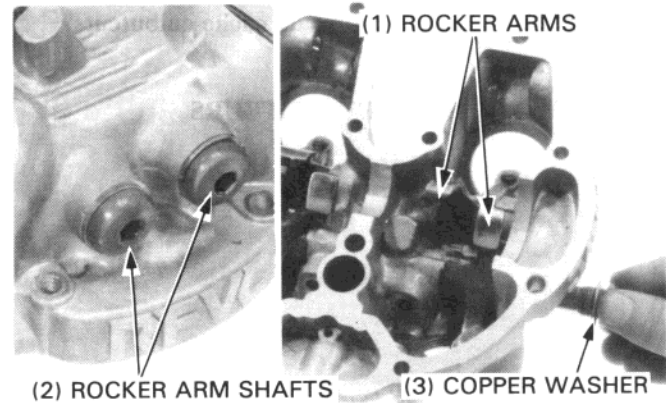

ROCKER ARM INSPECTION

Inspect the rocker arms and the sub rocker arms for wear or damage.

NOTE

- If any rocker arms require servicing or replacement, inspect the cam lobes for scoring, chipping or flat spots.

Measure the ID of the rocker arm and sub-rocker arm.

SERVICE LIMITS:

ROCKER ARM: 11.55 mm (0.455 in)
SUB-ROCKER ARM IN: 8.05 mm (0.317 in)
EX: 7.05 mm (0.277 in)

