

CLUTCH/KICK STARTER



KICK STARTER SPINDLE OIL SEAL/BEARING REPLACEMENT

Check the oil seal and needle bearing for wear, excessive play or damage and replace if necessary. Remove the oil seal and needle bearing from the right crankcase cover.

Drive in a new needle bearing with the special tools. Install a new oil seal.

TOOLS:

DRIVER	07746-0010000
ATTACHMENT, 32 x 35 mm	07746-0010100
PILOT, 20 mm	07746-0040500

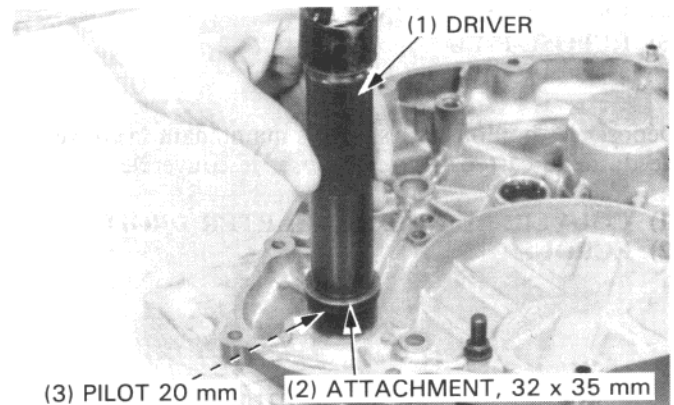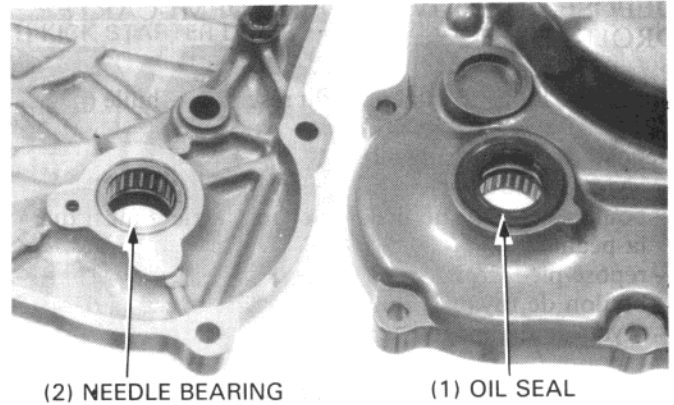

CLUTCH

REMOVAL

Remove the right crankcase cover (page 8-3). Remove the four clutch bolts and springs.

NOTE

- Loosen the bolts in a crisscross pattern in 2-3 steps.

Remove the clutch pressure plate, and a discs plate.

Remove the push rod tip, release bearing and lifter rod.

