

ALTERNATOR

| | | | |
|-------------------------------------|------------|------------------------------|------------|
| SERVICE INFORMATION | 9-1 | FLYWHEEL INSTALLATION | 9-4 |
| LEFT CRANKCASE COVER REMOVAL | 9-2 | LEFT CRANKCASE COVER | |
| FLYWHEEL REMOVAL | 9-3 | INSTALLATION | 9-4 |

SERVICE INFORMATION

GENERAL

- This section pertains to removal and installation of the alternator. These operations can be accomplished with the engine in the frame.
- For alternator inspection, refer to section 16.

TORQUE VALUE

| | |
|-----------------|-------------------------------|
| Flywheel | 125 N•m (12.5 kg-m, 90 ft-lb) |
| Crankcase cover | 12 N•m (1.2 kg-m, 9 ft-lb) |

TOOLS

Common

| | |
|-----------------|--------------------------------|
| Flywheel holder | 07725-0040000 |
| Rotor puller | 07733-0020001 or 07933-3290001 |