

ALTERNATOR

Install the drive sprocket cover.

Connect the clutch cable.
Adjust the clutch (page 3-14).

Connect the alternator wire connectors.
Install the seat.
Fill the oil tank with the recommended oil (page 2-2).

