


TRANSMISSION


TRANSMISSION DISASSEMBLY

Separate the crankcases (Section 10).


Pull the gearshift plate and remove the gearshift spindle.

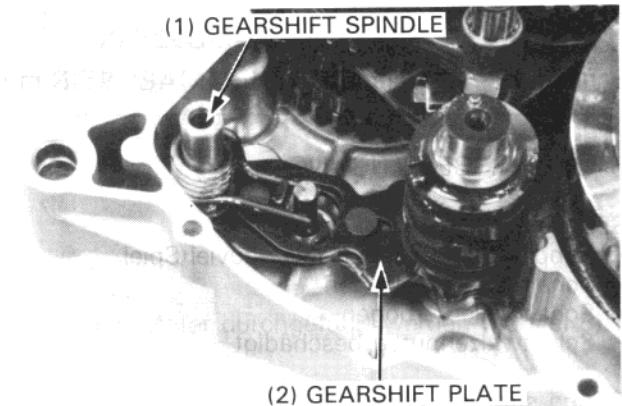

Bend down the lock washer tabs and remove the bolt and lock washer from the center shift fork.

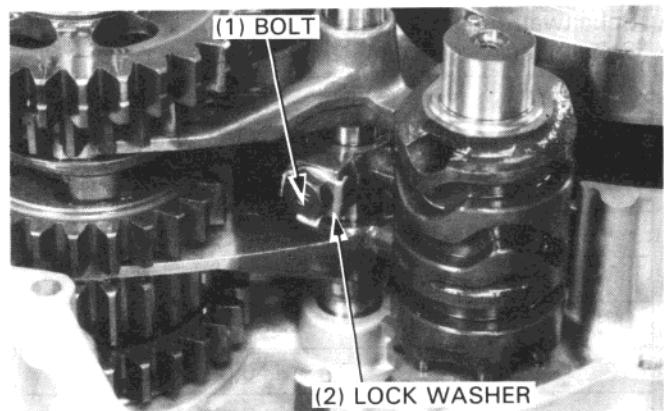

Remove the shift fork shaft, shift drum, and shaft forks.

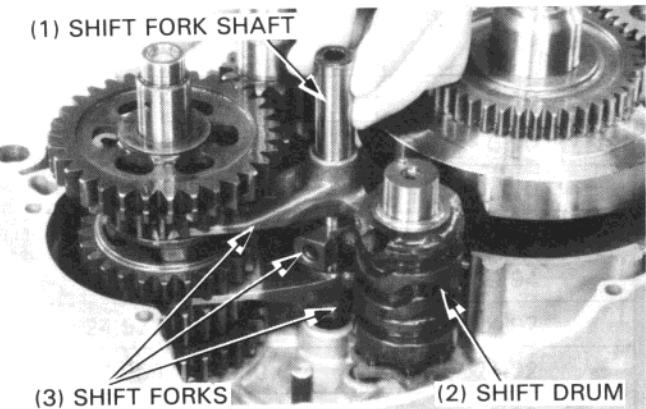

Remove the mainshaft and countershaft as an assembly.

