


FRONT WHEEL/SUSPENSION/STEERING

Install the front wheel (page 12-11).
Push the fork boots up until they just touch the steering stem and tighten the boot clamps, with the clamp screw rearward.

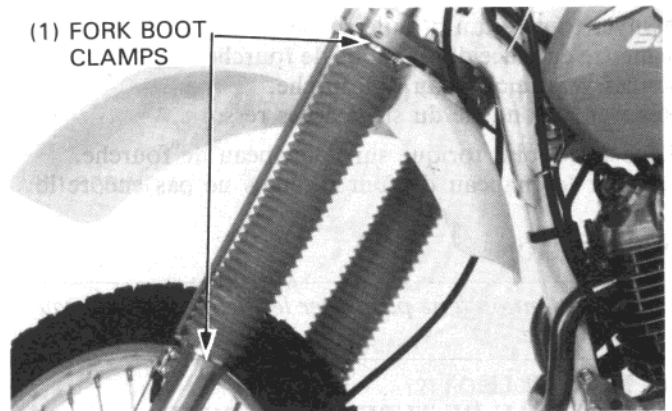

Tighten the fork caps to the specified torque.

TORQUE: 23 N·m (2.3 kg·m, 17 ft·lb)


Make sure all weight is off the front wheel and charge the fork with air.

Standard pressure: 0 kPa (0 kg/cm², 0 psi)

CAUTION

- Use a low-volume low-pressure pump to charge the fork.

Install the air valve caps.
Install the headlight (page 16-9).

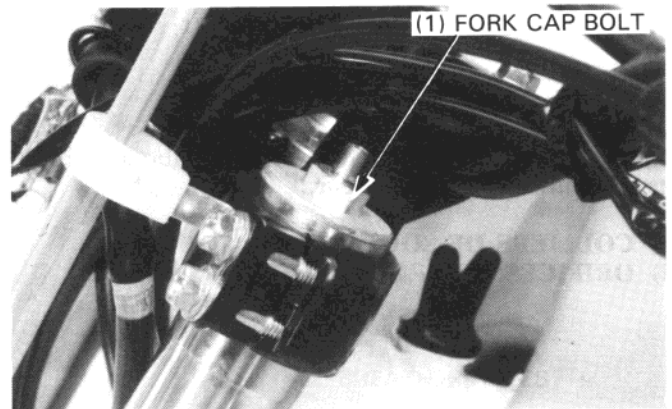


STEERING STEM

FORK BRIDGE REMOVAL

Remove the following components:

- headlight (page 16-8).
- instruments (page 16-10).
- handlebar (page 12-3).
- front wheel (page 12-6).
- front fender.

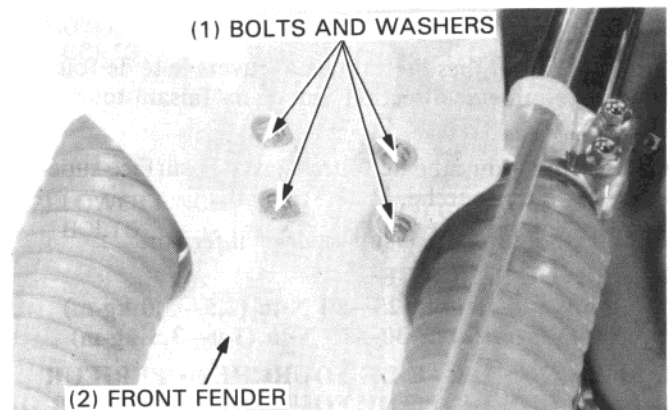

Remove the steering stem nut.

TOOL:

WRENCH, 30 x 32 mm

07716-0020400

