


## FRONT WHEEL/SUSPENSION/STEERING

Remove the fork tubes (page 12-11).  
Remove the washer and fork top bridge.  
Remove the lock washer and discard it.

### NOTE


- Replace the lock washer with a new one whenever it has been removed.

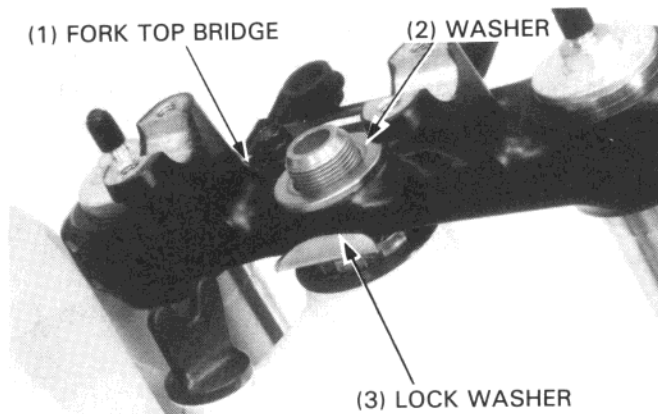


Remove the steering head bearing adjusting nut.

### TOOLS:

EXTENSION BAR 07716-0020500  
STEERING STEM NUT WRENCH 07916-KA50100

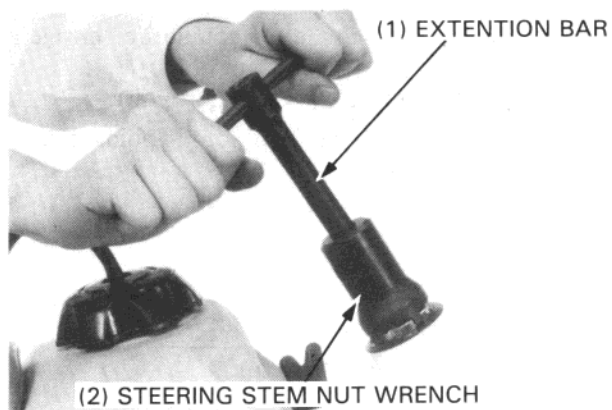

Remove the seal, upper bearing and steering stem from the head tube.

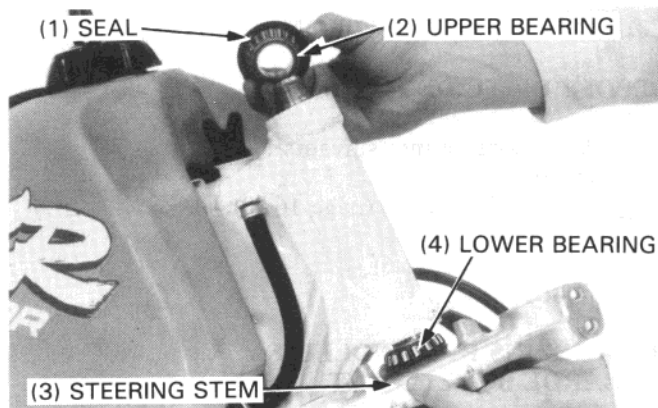

## BEARING REPLACEMENT

### NOTE

- Always replace the bearing and bearing races as a set.

Remove the upper and lower bearing races from the steering head.

### TOOL:

BALL RACE REMOVER 07953-MJ1000

