

REAR WHEEL/BRAKE/SUSPENSION


Install the drive chain.
Install the left chain adjuster and axle nut.
Adjust the drive chain slack (page 3-10).

Tighten the axle nut.

TORQUE: 95 N·m (9.5 kg-m, 69 ft-lb)


CAUTION

- *Hold the axle shaft securely to avoid damaging the puller lever with a wrench.*

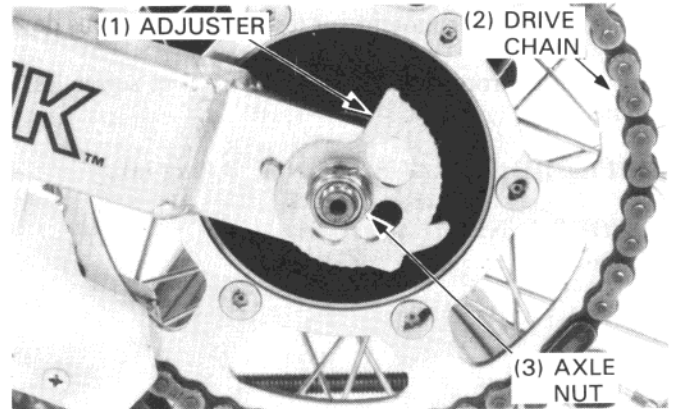

Connect the brake rod to the brake arm.

Adjust the rear brake pedal free play (page 3-13).

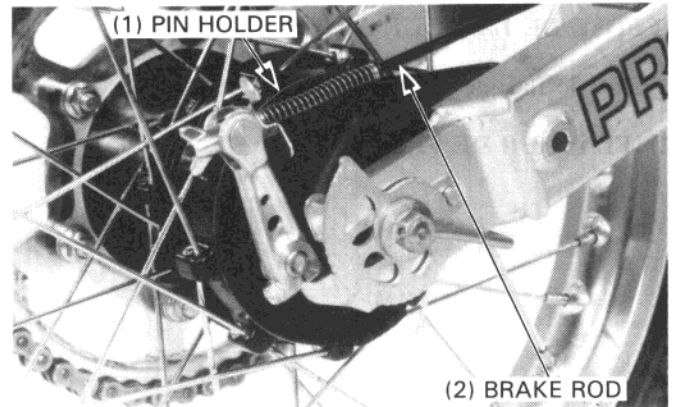


REAR BRAKE

▲ WARNING

- *Brake dust may contain asbestos.*
- *Inhaled asbestos fibers have been found to cause respiratory disease and cancer. Never use an air hose or dry brush to clean brake assemblies.*
- *Wear a protective face mask and thoroughly wash your hands when finished.*

Remove the rear wheel (page 13-3).
Remove the brake panel from the brake drum.

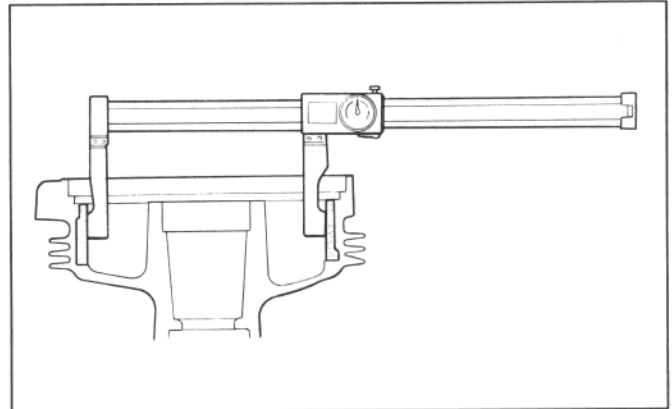

INSPECTION

Brake drum

Measure the rear brake drum I.D.

SERVICE LIMIT: 111.0 mm (4.37 in)

Brake lining

Measure the rear brake lining thickness.

SERVICE LIMIT: 2.0 mm (0.10 in)

