


REAR WHEEL/BRAKE/SUSPENSION


SHOCK ABSORBER

REMOVAL


Raise the rear wheel off the ground by placing a work stand or box under the engine.
Remove the seat and side cover.
Remove the air cleaner (page 4-4).
Loosen the reservoir mounting bands and reservoir.

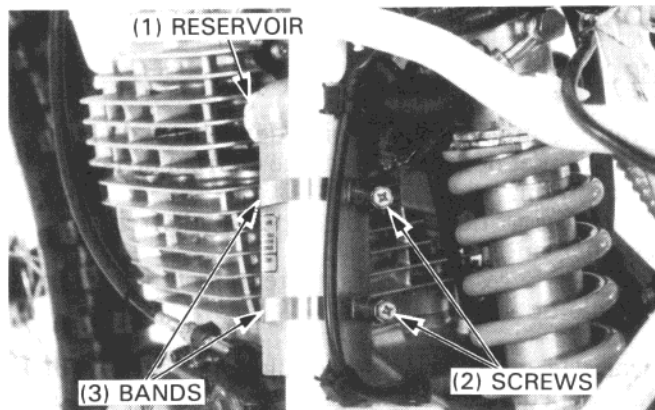

Remove the CDI unit from the frame.
Remove the upper mount nut and bolt.

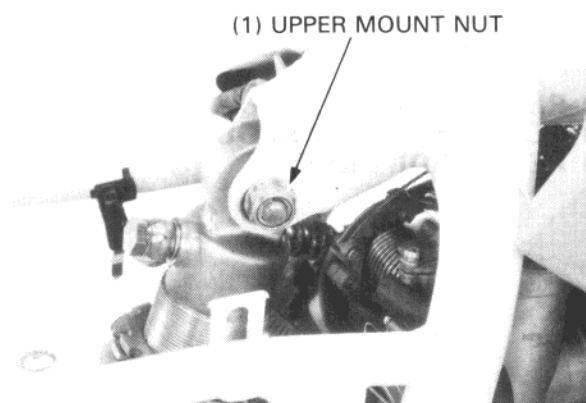

Raise the rear wheel until the rear shock absorber lower mount can be removed and then remove the lower mount bolt.
Remove the rear shock absorber.

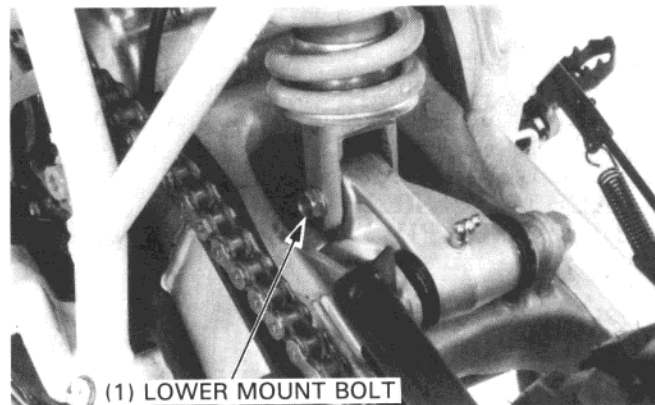

DISASSEMBLY

Loosen the lock nut and adjusting nut.

