


REAR WHEEL/BRAKE/SUSPENSION

Connect the shock arm to the swingarm and tighten the shock arm-to-swingarm pivot bolt.

TORQUE: 70 N·m (7.0 kg-m, 50 ft-lb)

Install the drive chain cover and drive chain guide slider.


Install the rear wheel (page 13-8).

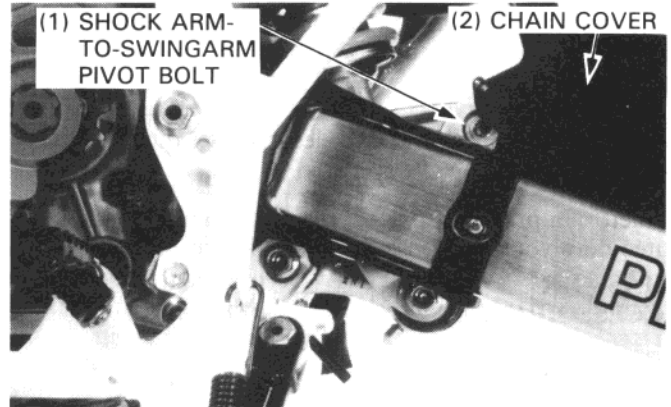

SHOCK LINKAGE

REMOVAL


Remove the rear shock absorber.
Loosen the shock arm-to-shock link pivot bolt.
Remove the shock arm-to-swingarm pivot bolt.
Remove the shock link-to-frame pivot bolt.
Remove and disassemble the shock arm and shock link.

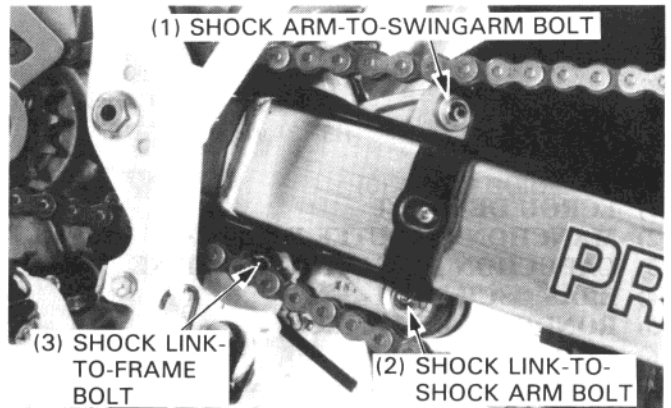

INSPECTION

Inspect the shock linkage dust seals, collars, needle bearings and spherical bearing.

Replace them if they have score marks, scratches, or excessive or abnormal wear.

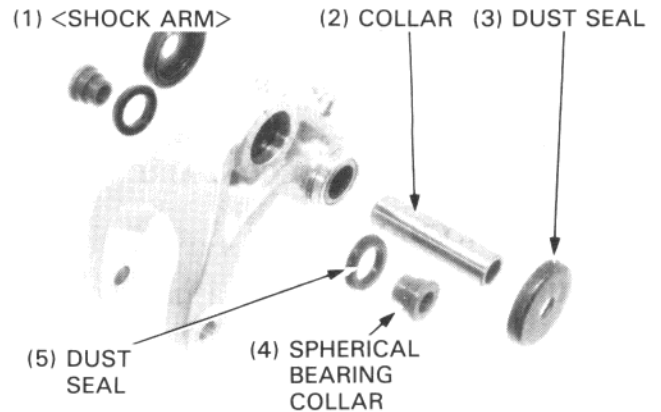

NOTE

- Be careful not to loosen the needle rollers of the shock arm and link pivot needle bearings.
- If the needle rollers are out of place, first inspect them for wear or damage then reposition them using molybdenum disulfide grease.

