

## TROUBLESHOOTING

### **Brake lever soft or spongy**

- Air in hydraulic system
- Low fluid level
- Hydraulic system leaking

### **Brake lever too hard**

- Sticking piston (s)
- Clogged hydraulic system
- Pads glazed or worn excessively

### **Brakes drag**

- Hydraulic system sticking
- Sticking piston (s)
- Incorrect rear brake pedal adjustment

### **Brakes grab or pull to one side**

- Pads contaminated
- Disc or wheel misaligned

### **Brake chatter or squeal**

- Pads contaminated
- Excessive disc runout
- Caliper installed incorrectly
- Disc or wheel misaligned