



ELECTRICAL SYSTEM

Disconnect the headlight wire connectors.

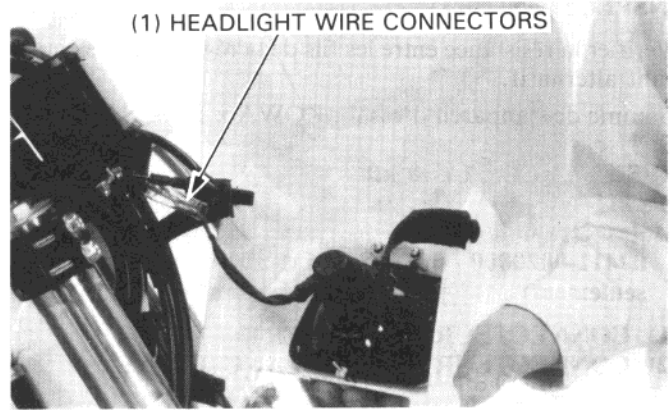

Remove the clip securing the headlight bulb socket and then remove the socket, and replace the headlight bulb, if necessary.

Remove the headlight adjusting screw and the two mounting screws, then remove the headlight.

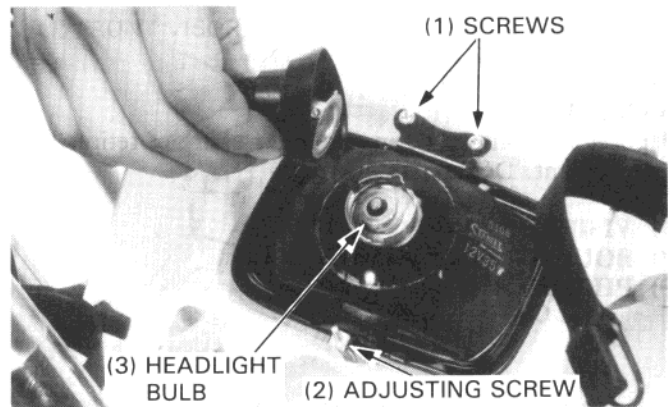

INSTALLATION

Install the headlight in the reverse order of removal. Adjust the headlight vertical beam (page 3-14).

