

## ELECTRICAL SYSTEM

---

### HORN

#### INSPECTION

Disconnect the horn wire connectors and connect a fully charged 12 V battery to the horn terminals.

The horn is normal if it sounds when the battery is connected across the terminals.

