


Remove the O-ring from the housing cover.
Remove the thermostat from the housing.

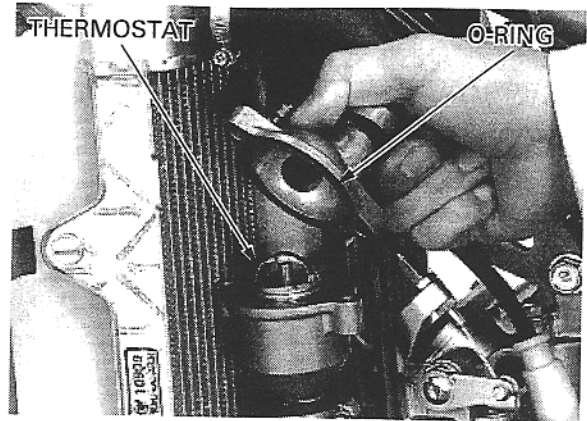


INSPECTION

⚠ WARNING

- *Wear insulated gloves and adequate eye protection.*
- *Keep flammable materials away from the electric heating element.*

NOTE:

Replace the thermostat if valve stays open at room temperature, or if it responds at temperatures other than those specified.

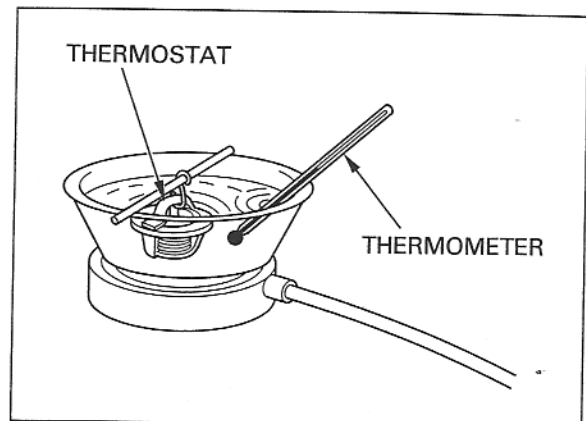

Visually inspect the thermostat for damage.

Do not let the thermostat touch the pan, or you will get false readings.

Heat the water with an electric heating element to operating temperature for 5 minutes. Suspend the thermostat in heated water to check its operation.

THERMOSTAT BEGINS TO OPEN:

80–84 °C (176–183 °F)

VALVE LIFT:

8 mm (0.3 in) minimum at 95°C (203°F)

INSTALLATION

Install the thermostat by aligning it with the groove in the housing.

