



FRONT WHEEL/SUSPENSION/STEERING


Remove the fork damper and oil lock piece from the fork tube.

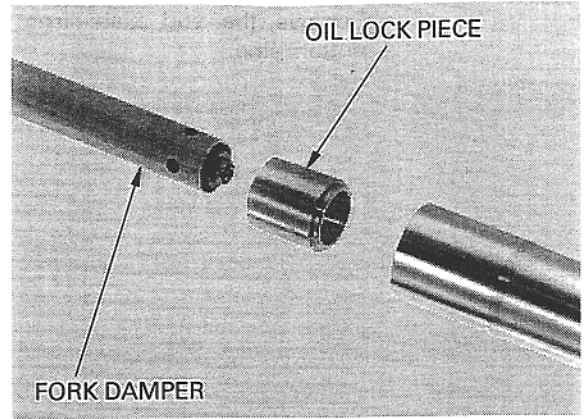

Remove the lock nut from the damper rod.

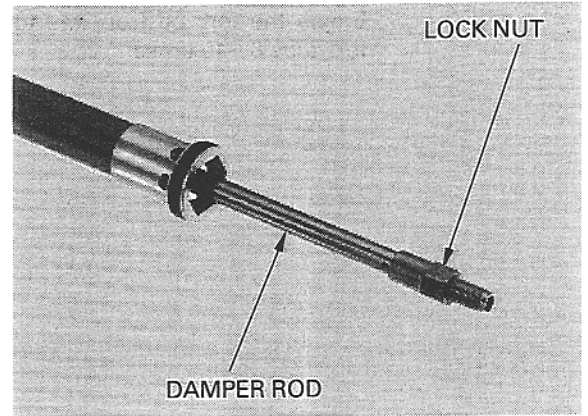

Remove the rebound spring and piston rod from the fork damper.

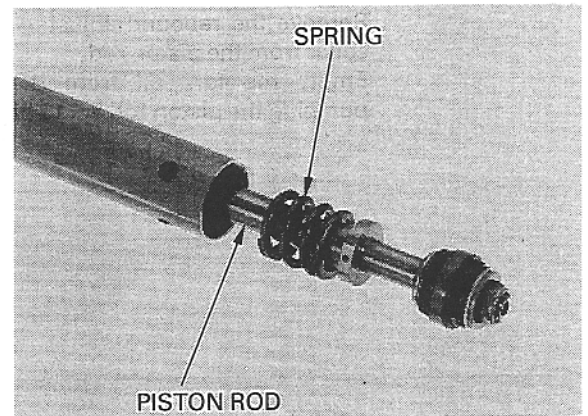

Remove the stopper ring from the fork slider.

CAUTION:

Be careful not to scratch the fork tube.

