


① Front brake adjusting nut
Fig. 24

1. To adjust, turn the front brake adjusting nut ① in either direction (Fig. 24). Turning the adjusting nut clockwise will decrease the free play and turning it counterclockwise will increase the free play.


6. REAR WHEEL AND REAR BRAKE

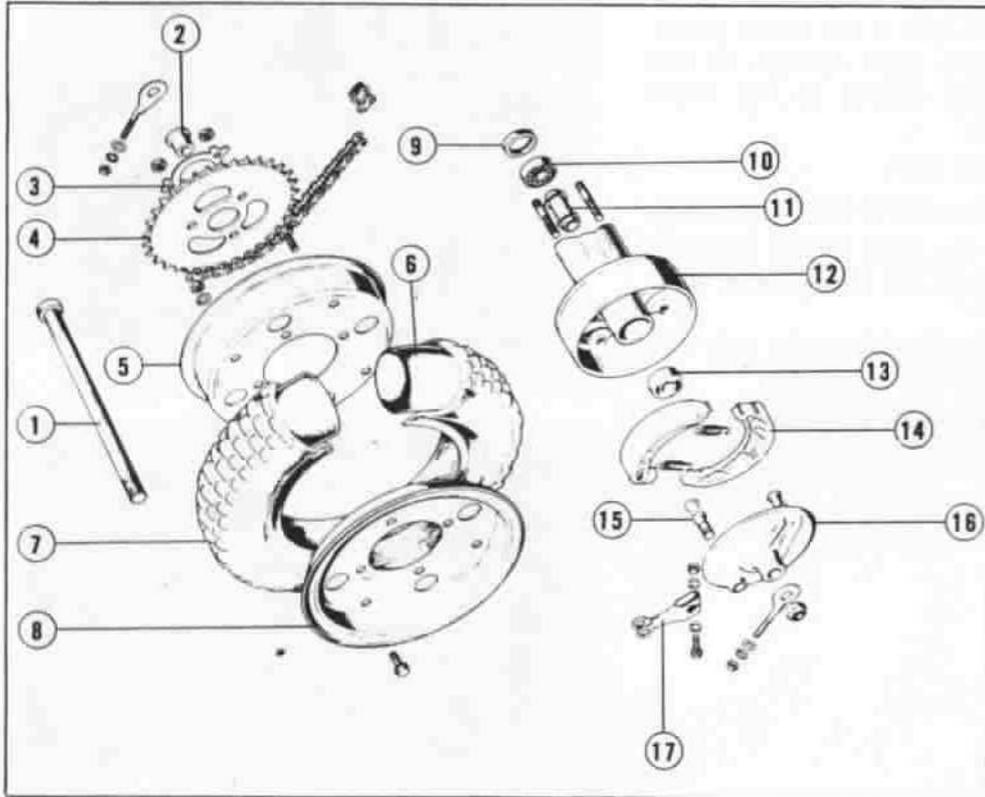

- ① Rear wheel axle
 - ② Left rear wheel side collar
 - ③ Tongued washer B
 - ④ Final driven sprocket
 - ⑤ Left wheel rim
 - ⑥ Wheel tube
 - ⑦ Wheel tire
 - ⑧ Right wheel rim
 - ⑨ Oil seal, 18328
 - ⑩ 6201 radial ball bearing
 - ⑪ Rear axle distance collar
 - ⑫ Rear wheel hub
 - ⑬ 6201R radial ball bearing
 - ⑭ Brake shoe
 - ⑮ Rear brake cam
 - ⑯ Rear brake panel
 - ⑰ Rear brake arm
- Fig. 25

A. Disassembly

1. Loosen the axle nut and adjuster nut.
2. Disconnect the rear brake rod (Fig. 26).

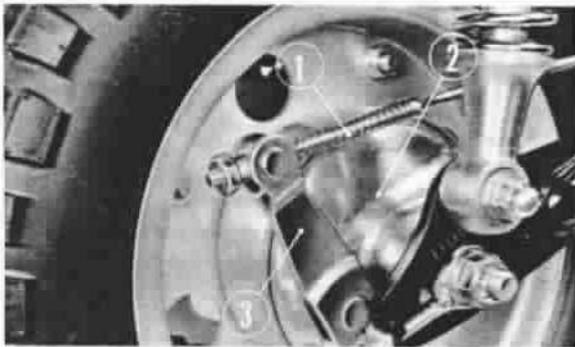

① Brake rod ② Brake panel ③ Brake arm
Fig. 26