



## MAJOR COMPONENTS (Information you need to operate this motorcycle)

### SUSPENSION


The spring preload adjuster (1) has 5 spring preload positions for different load or riding conditions.

Adjust the spring preload by turning the spring preload adjuster with the pin spanner (2) and extension bar (3) provided in the tool kit (page 69).

Always adjust the spring preload adjuster position in sequence (1-2-3-4-5 or 5-4-3-2-1). Attempting to adjust directly from 1 to 5 or 5 to 1 may damage the spring preload adjuster.

Position 1 is for light loads and smooth road conditions. Positions 3 to 5 increase spring preload for a stiffer rear suspension, and can be used when the motorcycle is more heavily loaded. Be certain to adjust both spring preload adjusters to the same position.

Standard position: 2

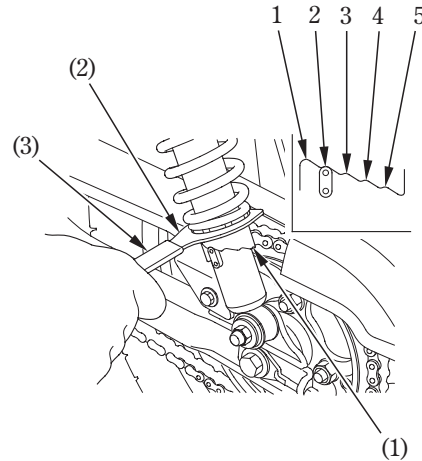

- (1) Spring preload adjuster
- (2) Pin spanner
- (3) Extension bar

