


FUEL SYSTEM

Hang the float valve onto the float arm lip.
Install the float valve, float and float pin.

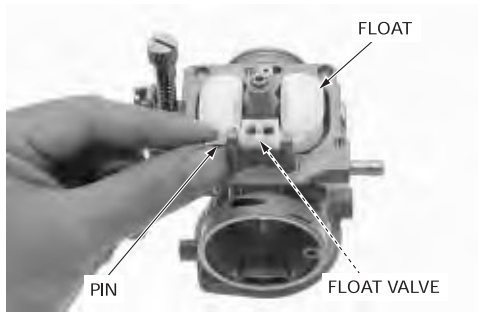

FLOAT LEVEL INSPECTION

NOTE:

Set the float level gauge so that it is perpendicular to the float chamber face at the highest position of the float.

With the float valve seated and the float arm just touching the valve, measure the float level with the float level gauge.

TOOL:


Float level gauge

07401 - 0010000

FLOAT LEVEL: 13 mm (0.5 in)

The float cannot be adjusted.
Replace the float assembly if the float level is out of specification.

Install a new O-ring into the groove in the float chamber cover.

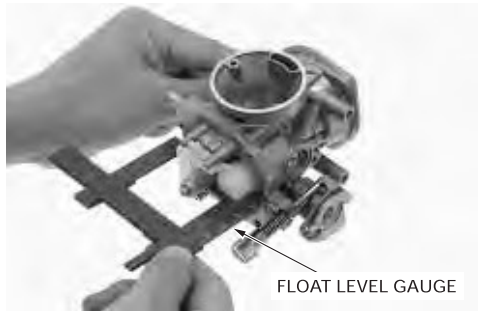

Install the float chamber cover and tighten the three screws.

