

//////TIRE RECOMMENDATION//////

Check tire pressure frequently, and maintain pressure within a range of 0.5~1.5 kg/cm² (7~21 psi), which will provide the best handling characteristics and traction for your riding conditions.

WARNING:


- Improper tire inflation will cause abnormal tread wear or other damage and create a safety hazard.
- Check tire pressures frequently and adjust if necessary.
- It is recommended that the tires are replaced when the tread depth at the center of the tire is less than 3mm (0.12 in.).
- Operation with excessively worn tires is very hazardous and will adversely affect traction, steering and handling.

//////STARTING THE ENGINE//////

WARNING: Ensure that the transmission is in neutral before starting the motorcycle. Attempting to start the engine with the transmission in gear might result in injury to the rider or damage to the motorcycle.

Starting a Cold Engine

1. Turn the fuel valve to the "ON" position (page 13)

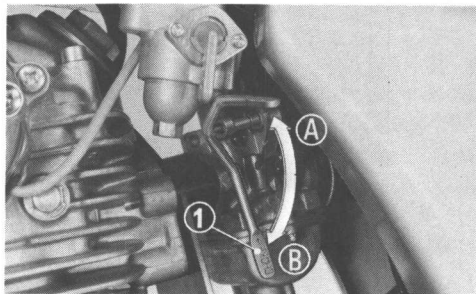

① Choke lever