


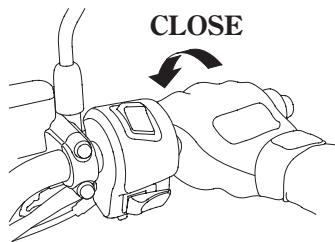


5. Be sure to keep the throttle closed and the rear brake lever locked while starting and warming up the engine.

6. Allow the engine to warm up before riding (See **“RIDING”**, page 74).

Do not **“BLIP”** the throttle (open and close rapidly) as the scooter will move forward suddenly, causing possible loss of control. Do not leave the scooter unattended while the engine is warming up.



To use the Idling Stop system, push the Idling Stop switch (4) to **“IDLING STOP”** (see **“IDLING STOP SYSTEM”**, page 52).

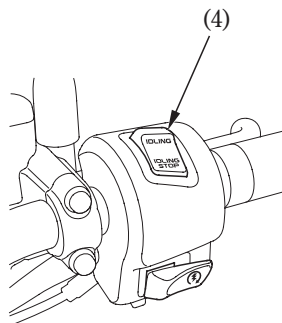

(4) Idling Stop switch

