

Air Pressure:


You may relieve accumulated air pressure in the fork legs by using the pressure release screws.

The front wheel should be off the ground before you release the pressure.

The standard air pressure is:

0 kPa (0 kgf/cm² , 0 psi)

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the pressure release screws (1).
3. Check that the O-ring is in good condition.
4. Install the pressure release screws.

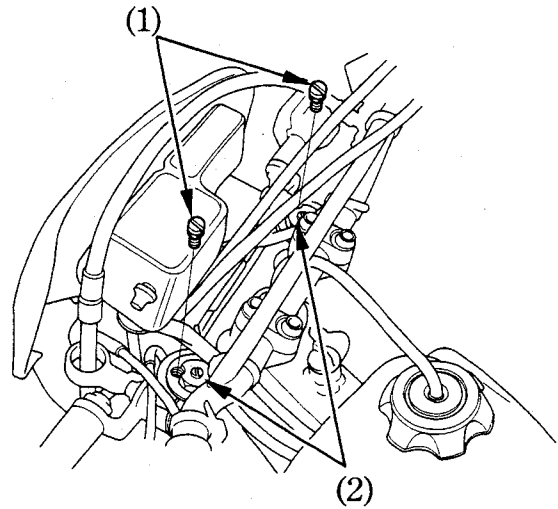

- (1) Pressure release screws
(2) Fork caps