



CYLINDER HEAD/VALVES

Install the carburetor insulator making sure that the O-ring is properly seated.

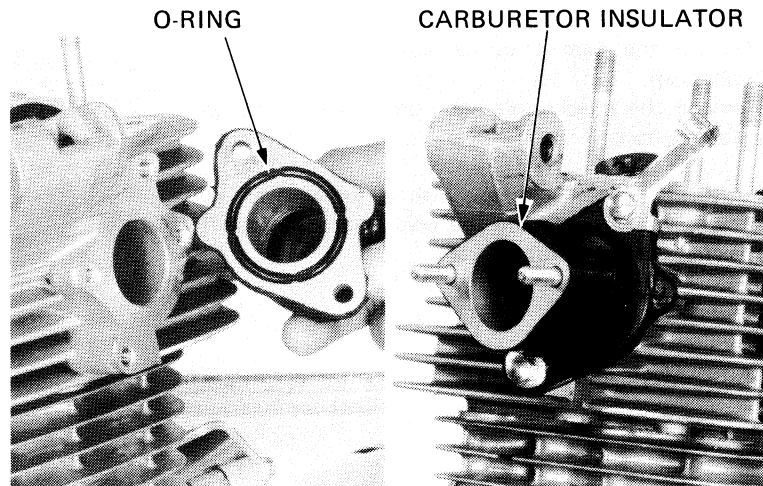

Install the rocker arms and rocker arm shafts in the cylinder head cover.
Install the set plate and tighten the set plate screw.
Install the decompressor lever.
Tighten the decompressor lever guide bolt.

TORQUE: 5–7 N·m
(0.5–0.7 kg·m, 3.6–5 ft·lb)

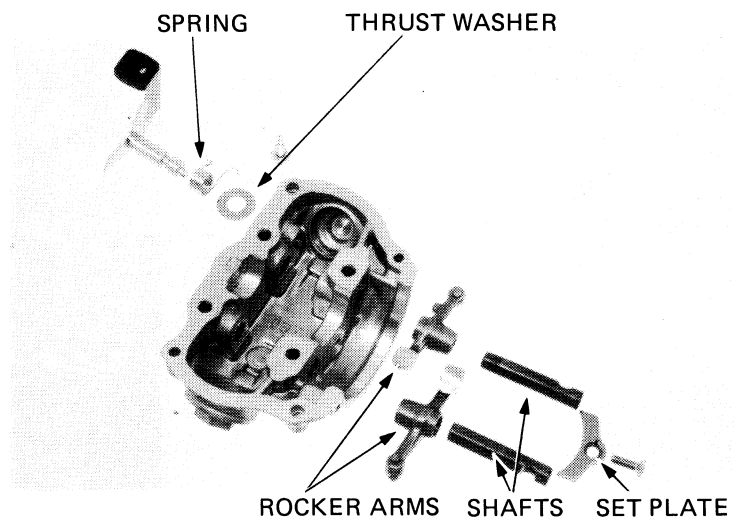

Loosen the valve adjusting screws.
Apply liquid sealant to the cylinder head cover mating surface.

NOTE

Keep sealant away from the camshaft bearing surfaces.

DO NOT APPLY SEALANT TO THIS AREA

