


ALTERNATOR


Install the rotor.
Install the washer and nut.
Hold the rotor with a universal holder.
Tighten the nut.

TORQUE: 65–75 N·m
(6.5–7.5 kg·m, 47–54 ft·lb)

After installing the rotor, inspect the ignition timing
(Page 2-9).

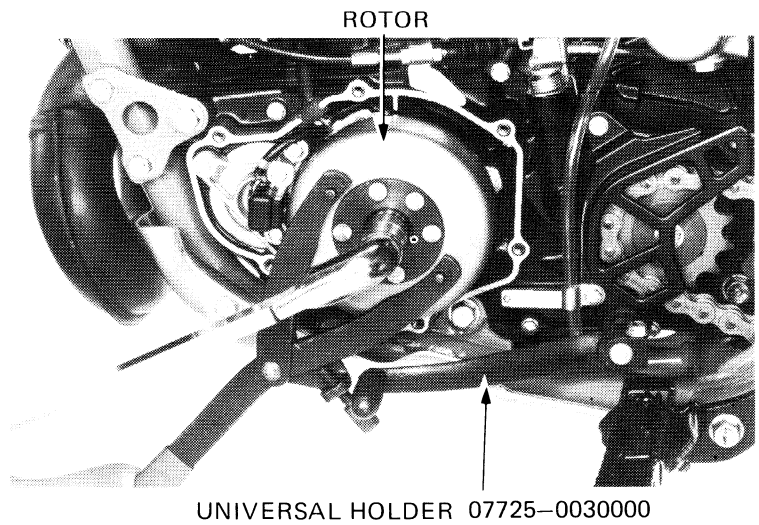

Install the gasket.

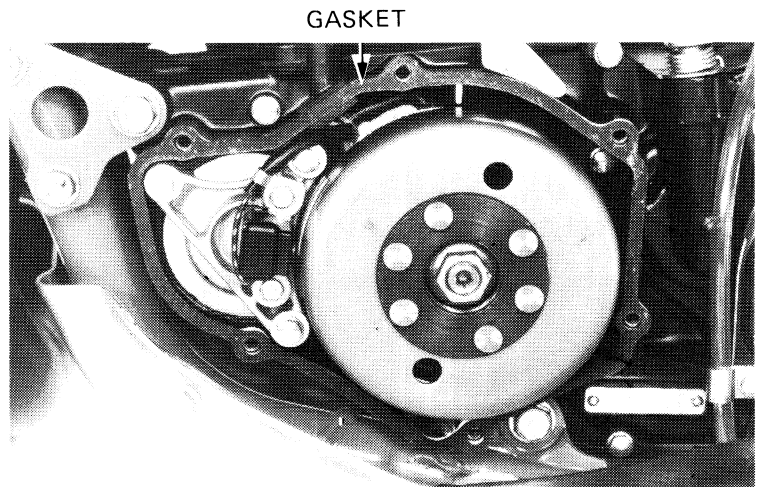

Install the left crankcase cover.

