


# If a Fuse Blows

## Main and Shift Motor Fuse Access

### UNDER SEAT

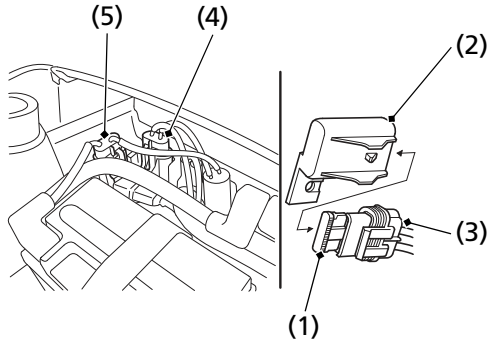

- |                          |                                      |
|--------------------------|--------------------------------------|
| (1) fuse                 | (4) main fuse holder assembly        |
| (2) fuse holder assembly | (5) shift motor fuse holder assembly |
| (3) fuse holder          |                                      |

1. To prevent an accidental short circuit, turn the ignition switch OFF (O) before checking or replacing the fuses.
2. To access the fuse (1), remove the seat ([page 92](#)).
3. Remove the fuse holder assembly (2).
4. Pull the old fuse out of the fuse holder (3).
5. Push the new fuse into the fuse holder.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

6. Install the fuse holder assembly and seat.