

Cross-reference the crankpin and rod codes to determine the replacement bearing color.


BEARING THICKNESS:

A (Brown): Thick

B (Green): ↑

C (Yellow): Thin

IDENTIFICATION COLLAR

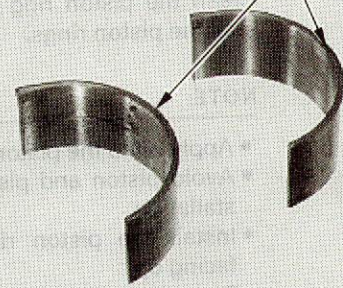

CRANKPIN BEARING SELECTION TABLE:


Unit: mm (in)

		CONNECTING ROD I.D. CODE	
		1	2
		43.000 – 43.008 (1.6929 – 1.6932)	43.008 – 43.016 (1.6932 – 1.6935)
CRANKPIN O.D. CODE LETTER	A	39.995 – 40.003 (1.5746 – 1.5749)	C (Yellow)
	B	39.987 – 39.995 (1.5743 – 1.5746)	B (Green)
			B (Green)
			A (Brown)

Install the bearing inserts into the connecting rod and bearing cap.

NOTE:

Align the oil hole between the connecting rod and bearing, and also align the bearing tabs with the groove in the connecting rod and bearing cap.

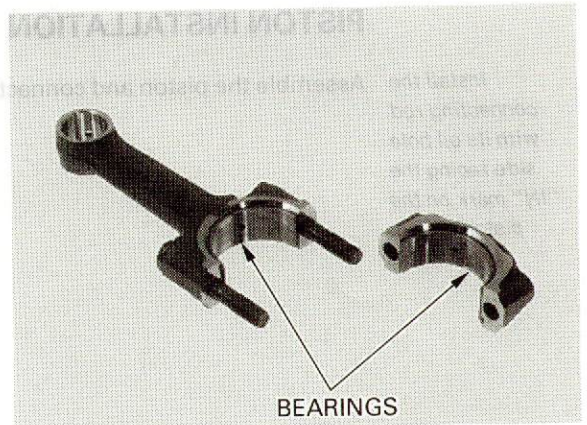

BEARINGS