


## HYDRAULIC BRAKE

Remove the four caliper assembly torx bolts and separate the caliper halves.

ASSEMBLY BOLTS

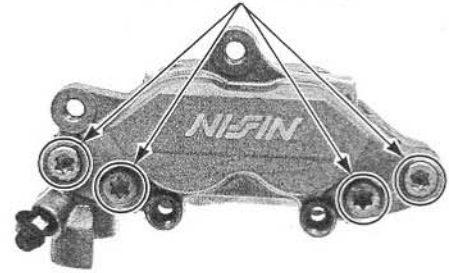


Mark the pistons to ensure correct reassembly.

Remove the following:

- Joint seal
- Caliper piston A
- Caliper piston B

PISTON B

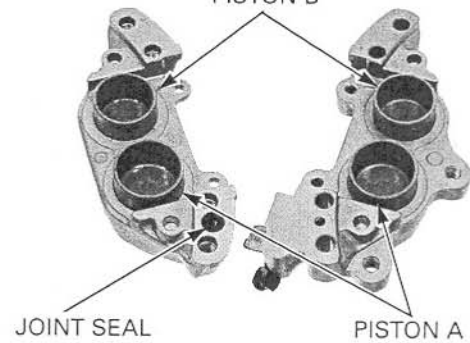


Be careful not to damage the piston sliding surface.

Push the dust seals and piston seals in and lift them out.

Clean the seal grooves with clean brake fluid.

PISTON SEAL

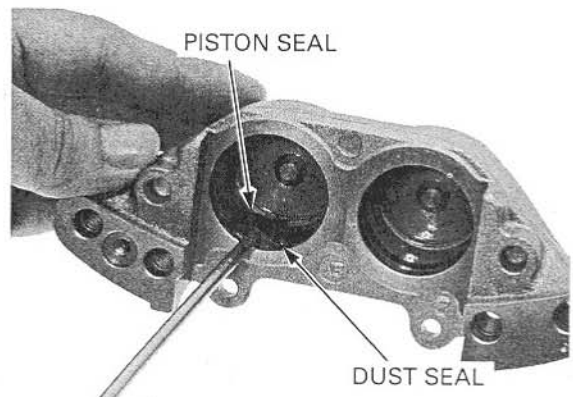

### INSPECTION

Check the caliper cylinder for scoring or other damage.

Measure the caliper cylinder I.D.

#### SERVICE LIMITS:

Cylinder A: 32.092 mm (1.2635 in)

Cylinder B: 30.292 mm (1.1926 in)

CYLINDER A

CYLINDER B

