

CASE BEARING AND OIL SEAL REPLACEMENT


Heat the gear case 80°C (176°F). Tap the gear case with a plastic hammer and remove the ring gear and pinion bearings.

WARNING

Always wear gloves when handling the gear case after it has been heated.


NOTE:

Use bearing remover, 35 mm, 07936-3710400 to remove ring gear case bearing.

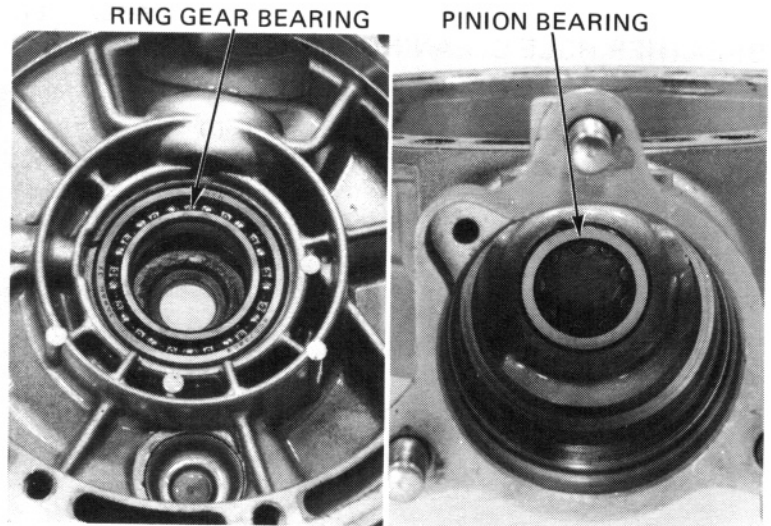

Remove the ring gear shaft oil seal.

Drive a new oil seal into the case, using the special tools.

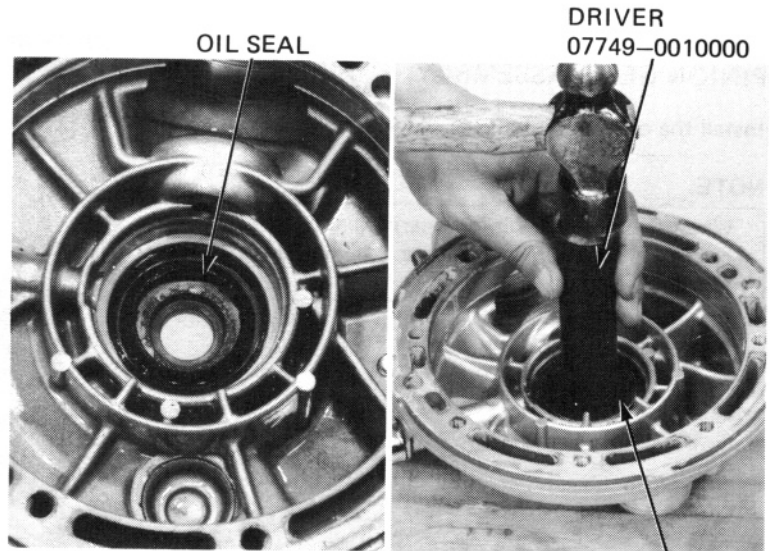

Drive new pinion and ring gear bearings into the case.

