

Headlight Switch

The headlight switch (1) has two positions; "ON" and "OFF".


ON: Headlight, taillight and meter lights on.

OFF: Headlight, taillight and meter lights off.

NOTE: The headlight operates only when the engine is running.

Headlight Dimmer Switch (U)

Turn the headlight dimmer switch (2) to "Lo" for low beam, and "Hi" for high beam.

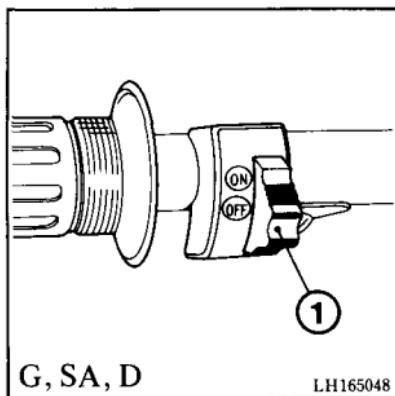

G, SA, D

LH165048

Interruptor del faro delantero

El interruptor del faro delantero (1) tiene tres posiciones. "ON" y "OFF".


ON: Faro delantero, luz trasera y lámparas para instrumentos estarán encendidos.

OFF: Faro delantero, luz trasera y lámparas indicadoras estarán apagados.

NATA: El faro funciona solamente cuando el motor está en marcha.

Interruptor conmutador del haz del faro delantero (U)

Coloque el interruptor conmutador del haz del faro delantero (2) en posición "Lo" para obtener el haz bajo, y en posición "Hi" para el alto.

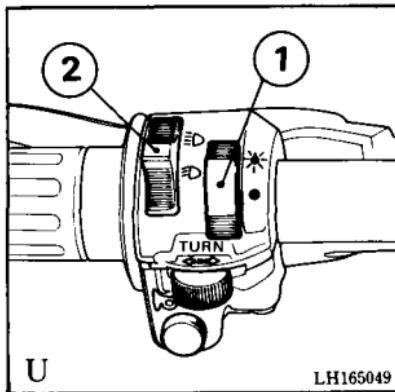

U

LH165049