


STARTING THE ENGINE

1. Turn the fuel valve and fuel tank cap lever to the “ON” position.
2. Insert the key in the ignition switch and turn to the “ON” position.
3. Shift the transmission into neutral. The neutral indicator (green) should go on.
4. Raise the choke lever (1) to fully closed position (A), if the engine is cold.

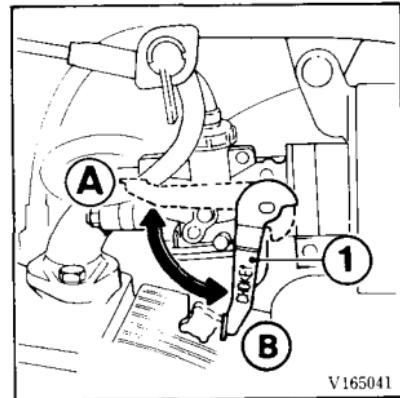

V165041

ARRANQUE DEL MOTOR

1. Coloque la válvula de combustible y la palanca de la tapa del depósito en posición abierta “ON”.
2. Inserte la llave del interruptor del encendido y colóquela en posición “ON”.
3. Coloque la palanca de mando de transmisión en el punto muerto. Vea si se enciende la lámpara indicadora de neutro (Verde).
4. Levante la palanca del estrangulador (1) hacia la posición completamente cerrada (A), cuando el motor esté frío.