


## FUEL AND OIL

### Fuel Filler Cap

Fuel capacity:	C90	– 5.5 lit. (1.45 U.S. gal., 1.21 Imp. gal.)
	C90DX	– 5.0 lit. (1.32 U.S. gal., 1.10 Imp. gal.)
Reserve fuel supply:	C90	– 1.0 lit. (0.26 U.S. gal., 0.22 Imp. gal.)
	C90DX	– 0.9 lit. (0.24 U.S. gal., 0.20 Imp. gal.)

When refueling, raise the seat and turn the fuel filler cap (2) counterclockwise. To raise the double seat, unlock the seat latch by pulling the lever (1). Use low-lead gasoline with an Octane number of 91 or higher. If this is not available, leaded regular gasoline can be used.

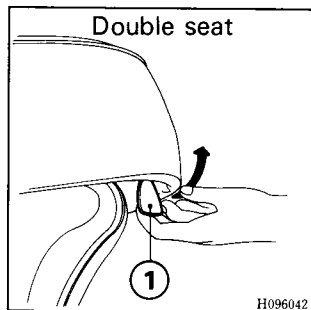

## COMBUSTIBLE Y ACEITE

### Tapa del llenador de combustible

Capacidad de combustible:	C90	– 5,5 lit.
	C90DX	– 5,0 lit.
Capacidad de combustible de reserva:	C90	– 1,0 lit.
	C90DX	– 0,9 lit.

Al rellenar el depósito de combustible, levante el asiento y gire la tapa del llenador de combustible (2) en el sentido contrario del movimiento de las manecillas del reloj. Para levantar el asiento doble, desatranque el cerrojo del asiento halando la palanca (1). Utilice la gasolina de poco tenor de plomo con el índice octánico de 91 o superior. Si esta gasolina no está disponible, se puede utilizar la gasolina corriente emplomada.

