


Deluxe type:

1. Start the engine and set the idle speed to 1,400 rpm.
2. Loosen the lock nut (1) and cam chain adjuster (2). This will automatically apply the proper tension to the cam chain.
3. If the chain is still noisy even after the above adjustment, remove the sealing bolt (3) and screw in the tensioner bolt (4) gradually until the cam chain becomes quiet.
4. After completing the adjustment, tighten the sealing bolt, chain adjuster and lock nut securely.

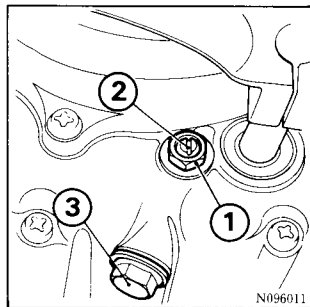

Tipo de lujo:

1. Arranque el motor y déjelo correr en vacío con una velocidad de 1.400 r.p.m.
2. Afloje la contra-tuerca (1) y el ajustador de la cadena de levas (2). Esto aplicará automáticamente una tensión apropiada a la cadena de levas.
3. Si la cadena continua emitiendo ruidos después de este ajuste según lo expuesto arriba, remueva el perno de sellar (3) y el tornillo situado en el perno de tensor (4) gradualmente hasta que la cadena de levas se haga silenciosa.
4. Después de terminar el ajuste completamente, apriete el perno de sellar, el ajustador de cadena y la contra-tuerca firmemente.

