


Throttle Operation

1. Check for smooth rotation of the throttle grip from the fully open to the fully close position at both full steering positions.
2. Check the throttle grip free play at the grip. Standard play is approx. 10–15° of the grip rotation. To adjust the play, remove the front cover, pry the rubber cap (1) and turn the adjuster (2).

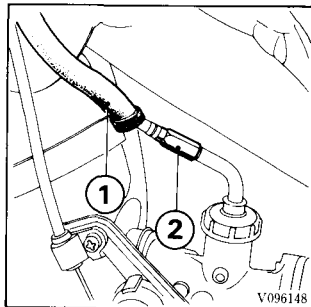

Operación del acelerador

1. Verifique el giro suave del puño del acelerador de la posición completamente abierta hasta la posición completamente cerrada, en ambas posiciones extremas de la dirección.
2. Revise el juego del puño de mando de gases. El juego normal es de 10 – 15° aproximadamente, de la rotación del puño. Para ajustar el juego, remueva la cubierta delantera, levante la tapa de caucho (1) y gire el ajustador (2).