


## Drive Chain

### Drive chain adjustment:

Check the drive chain for wear and tension. If it appears dry, apply a lubricant.

1. Place the motorcycle on the center stand. Shift the transmission into neutral.
2. Move the chain (1) up and down with your fingers at a point midway between the sprockets. Adjust slack so that it is approx. 10–20 mm (1/2–1/3 in.)

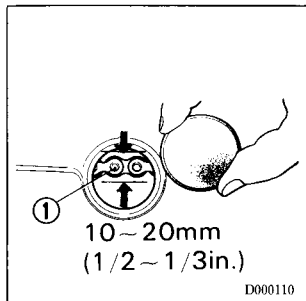

## Cadena de transmisión

### Ajuste de la cadena de transmisión

Revise la tensión de la cadena de transmisión mensualmente; de forma igual, la dureza de operación debido a lubricación inadecuada.

1. Apoya la moto en su soporte principal. Pase la transmisión en punto muerto. Coloque la palanca de mando de transmisión en la posición de punto muerto.
2. Empuje la cadena (1) hacia arriba y hacia abajo, con los dedos a un punto medio de los piñones dentados. Ajuste el juego de modo que éste sea de 10–20 mm, aproximadamente.