


Ignition Switch

The ignition switch is located directly below the indicator panel.

OFF: All electric circuits open. Engine cannot be started. Remove the key when the ignition switch is OFF.

ON: All electric circuits close. Engine and lights can be operated. Key cannot be removed.

P (Parking): All electric circuits open except for taillight and position light. Remove the key while parking.

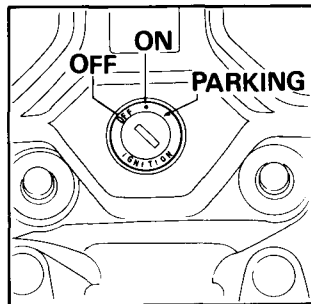

Interruptor del encendido

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

OFF (Desconectado): Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Quite la llave de contacto cuando el interruptor de encendido en posición "OFF."

ON (Conectado): Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

P (Estacionamiento): Todos los circuitos eléctricos están abiertos, excepto el de luz trasera y lámpara indicadora de posición. Quite la llave de contacto al estacionar.