


## Drive chain adjustment:

To adjust the drive chain:

1. Remove the cotter pin (2) and loosen the rear axle nut (3).
2. Loosen the lock nut (4) and turn the adjusting bolt (5) on both the right and left chain adjusters an equal amount of turns to increase or decrease chain slack. Align the chain adjuster index marks (6) with the rear end of the swingarm (7).

**NOTE:** If drive chain slack is excessive when the rear axle is moved to the furthest limit of adjustment, the drive chain is worn and must be replaced.

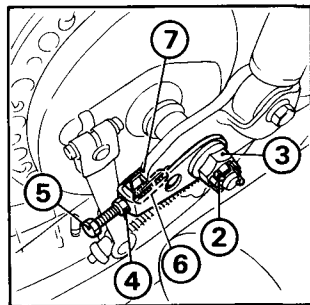

---

## Ajuste de la cadena de transmisión:

Para ajustar la cadena de transmisión, proceda como sigue:

1. Quite la clavija hendida (2) y afloje la tuerca del eje trasero (3).
2. Afloje la contratuerca (4) y gire el perno de ajuste (5) de ambos ajustadores de cadena, del lado derecho y el izquierdo, de igual cantidad de vuelta para aumentar o reducir la flojedad de la cadena. Alinee las marcas de índice del ajustador (6) con el extremo del brazo oscilante (7).

**NOTA:** Si la flojedad de la cadena de transmisión es excesiva, al desplazar el eje trasero hacia el más allá del límite de ajuste, la cadena de transmisión se considera desgastada y debe reemplazarse.