

Ignition Switch


The ignition switch is located directly below the indicator panel.

OFF: All electric circuits open. Engine cannot be started. Key can be removed.

ON: All electric circuits closed. Engine and light can be operated. Key cannot be removed.

P (PARKING): All electric circuits open except for taillight. Key can be removed.

LOCK (STEERING LOCK): General type only. See page 28.

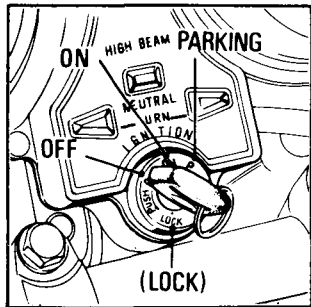

Interruptor del encendido

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

OFF: Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Se puede retirar la llave.

ON: Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

P (ESTACIONAMIENTO): Todos los circuitos eléctricos están cerrados, excepto el de las lámparas traseras. Se puede retirar la llave.

LOCK (BLOQUEO DEL MANUBRIO): Sólo para el tipo general. Vea pág. 28.