


Air Cleaner Servicing

1. Remove the air cleaner cover and case cover ① by unscrewing the nut ②.
2. Remove the cleaner element ③ by unscrewing the bolt ④ and connecting tube attaching screw ⑤ and clean by tapping, brushing lightly with a soft brush and then blowing from the inside.

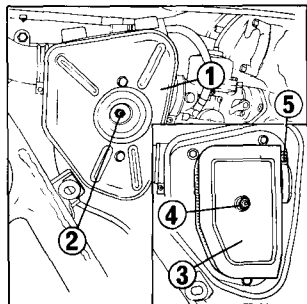

Limpieza del Depurador del Aire

1. Quite la cubierta del depurador del aire y la cubierta ① destornillando la tuerca ②.
2. Quite el elemento del depurador ③ destornillando el tornillo ④ y la rosca de vinculación del tubo de conexión ⑤ y empiece a limpiar tocando, cepillando ligeramente con un cepillo blando y finalmente soplando del aire al interior.