


## Rear Wheel Removal

1. Remove the muffler, unscrew the rear brake adjusting nut ① and disconnect the brake rod ② from the brake arm ③. Remove the stopper arm from the backing plate ④.
2. Remove the cotter pin from the end of the axle.
3. Unscrew the rear axle nut and pull out the rear wheel axle. Take out the wheel.  
Reverse the sequence for reinstallation.

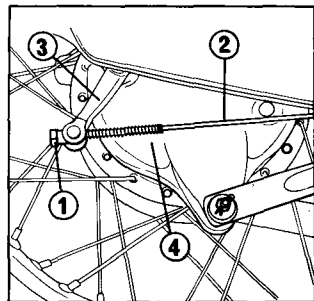

---

## Desmontaje de la rueda trasera

1. Quitar silenciador, aflojar la tuerca de ajuste ① del freno trasero y desconectar la varilla del freno ② desde el brazo de freno ③. Quitar el brazo desde la placa de refuerzo ④.
2. Quitar el pasador hendido desde el extremo del eje.
3. Aflojar la tuerca del eje trasero y sacar el eje de la rueda trasera afuera. Desmontar la rueda.  
Para el remontaje, efectuar las operaciones indicadas arriba en orden inverso.