


Spring preload adjustment:

The spring preload adjuster (2) has 22 positions to turn it with a 10 mm box wrench and handle grip provided in the tool box.

The adjuster is located behind the right side cover. Remove the right side cover. To reduce preload—turn the adjuster in counterclockwise direction to Low from the standard position.

To increase preload—turn the adjuster in clockwise direction to High from the standard position.

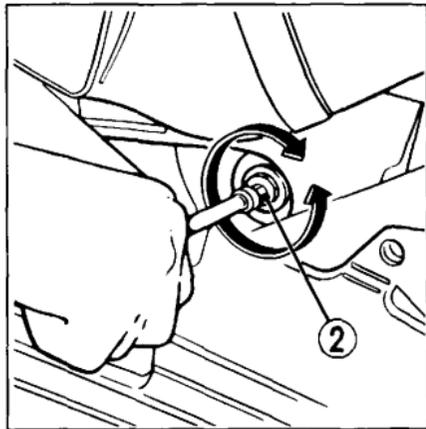

Réglage de précharge de ressort

L'écrou de réglage de précharge de ressort (2) peut être réglé à 22 positions de réglage avec une clé polygonale de 10 mm et une poignée prévues dans la trousse à outils. L'écrou de réglage est situé derrière le cache latéral droit. Déposer le cache latéral droit.

Pour réduire la précharge, tourner l'écrou de réglage dans le sens inverse des aiguilles d'une montre vers le bas à partir de la position standard.

Pour augmenter la précharge, tourner l'écrou de réglage dans le sens des aiguilles d'une montre vers le haut à partir de la position standard.