


Spark Plugs

1. Remove the seat (see page 74).
2. Remove the right and left inner covers by removing the screws (1) with the 5 mm hex wrench provided the tool kits.
3. Remove the fuel tank front mount bolts (2) and bracket.
4. Carefully pull out the upper side of left side cover until the fuel valve is clear and raise the fuel tank until the prop stay is locked.
5. Remove the spark plug with a plug wrench.

STANDARD: (NGK) DPR9EA-9
(ND) X27EPR-U9

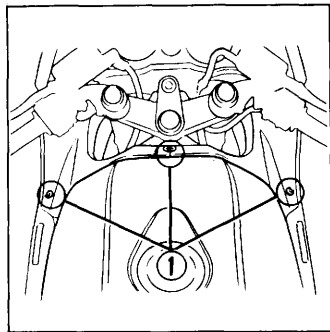

Bougies d'allumage

1. Déposer la selle (voir page 74).
2. Déposer les caches internes gauche et droit en dévissant les vis (1) avec la clé polygonale de 5 mm prévue dans la trousse à outils.
3. Déposer le support et les boulons (2) de montage avant du réservoir d'essence.
4. Tirer délicatement sur le côté supérieur du cache latéral gauche jusqu'à ce que le robinet d'essence se dégage, et soulever le réservoir d'essence jusqu'à ce que la barre du support soit verrouillée.
5. Déposer la bougie avec une clé à bougie.

STANDARD: (NGK) DPR9EA-9
(ND) X27EPR-U9

