


Front Wheel Removal

1. Raise the front wheel off the ground by placing a padded block centered under the engine.
 2. Disconnect the speedometer cable from the speedometer gearbox by removing the cable set screw (1).
 3. Remove the fixing bolts (3) and remove the right brake caliper (2).
- CAUTION: Support the caliper assembly so that it doesn't hang on the brake hose. Do not twist the brake hose.**
4. Loosen the right and left axle pinch bolts (4), and remove the axle bolt (5).
 5. Withdraw the front axle (6) and remove the front wheel.

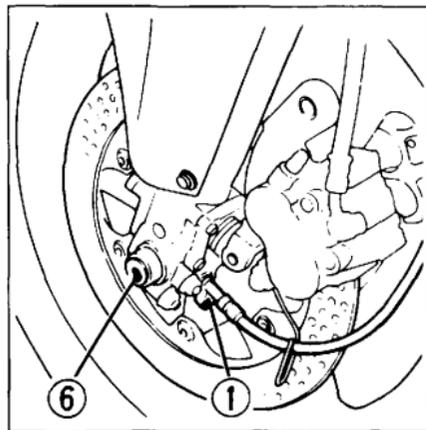

Dépose de la roue avant

1. Décoller la roue avant du sol en plaçant un bloc rembourré centré sous le moteur.
2. Déconnecter le câble du compteur de vitesse du boîtier de pignon de compteur de vitesses en retirant la vis de fixation du câble (1).
3. Déposer les boulons de fixation (3) et retirer l'étrier de frein droit (2).

PRÉCAUTION: Supporter l'ensemble d'étrier de manière à ce qu'il ne pende pas du flexible de frein. Ne pas tordre le flexible de frein.

4. Desserrer les boulons de bridage d'axe droit et gauche (4) et déposer le boulon d'axe (5).
5. Retirer l'axe de roue (6) et déposer la roue avant.

