


## SEAT REMOVAL

Remove the socket bolt caps. Remove the four socket bolts (1) from the grab rail (2). Remove the grab rail. Remove the grab rail lock nuts (3). Remove the seat nuts (4) and pull the seat backwards to remove it.

When reinstalling the seat, align the grooves (5) with the lugs (6) and push the seat down firmly. Reinstall the locknuts (3), the grab rail (2) and the socket bolts (1) and caps. Lift the seat to make sure the latches are secure.

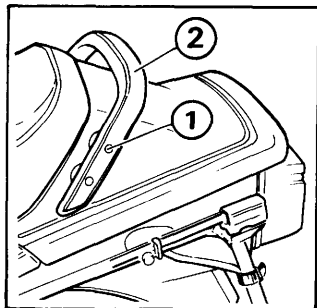

## Desmontaje del sillín

Quitar las tapas de los pernos con cabeza hueca. Quitar los cuatro pernos de cabeza hueca (1) de la barra de agarre (2). Quitar la barra de agarre. Quitar las contratuercas de la barra de agarre (3). Quitar las tuercas del sillín (4) y tirar del sillín hacia atrás para quitarlo.

Cuando se vuelva a instalar el sillín, alinear las ranuras (5) con las orejas (6) y presione firmemente el sillín hacia abajo. Volver a instalar las contratuercas (3), la barra de agarre (2) y los pernos de cabeza hueca (1) y los tapones. Levantar el sillín para cerciorarse de que las orejas están seguras.

